NOTE:

Please read all instructions carefully before using this product

Table of Contents

Safety Notice

Hardware Identifier

**Assembly Instruction** 

Parts List

Warranty

**Ordering Parts** 

Model TC-3508


Retain This Manual for Reference

140701

OWNER'S MANUAL



# MARCY POWER STATION TC-3508

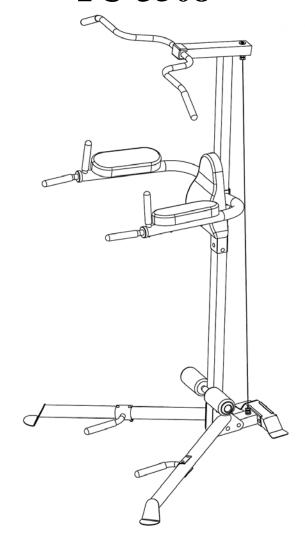

## IMPEX® INC.

2801 S. Towne Ave. Pomona, CA 91766 Tel: (800) 999-8899 Fax: (626) 961-9966

www.impex-fitness.com https://best-powertower.com

#### TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	2
HARDWARE IDENTIFIER	4
ASSEMBLY INSTRUCTIONS	5
EXPLODED DIAGRAM	9
PARTS LIST	10
WARRANTY	11
ORDERING PARTS	11

## **BEFORE YOU BEGIN**

Thank you for selecting the MARCY TC-3508 by IMPEX® INC. For your safety and benefit, read this manual carefully before using the machine. As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory. To avoid unnecessary delays, *please call our TOLL-FREE customer service number.* Our Customer Service Agents will provide immediate assistance to you.

Toll-Free Customer Service Number
1-800-999-8899
Mon. - Fri. 9 a.m. - 5 p.m. PST
www.impex-fitness.com
support@impex-fitness.com

## **IMPORTANT SAFETY NOTICE**

#### **PRECAUTIONS**

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

- 1. Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.
- 2. Only one person at a time should use the machine.
- 3. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- 4. Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
- 5. Keep hands away from all moving parts.
- 6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- 7. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 8. Do not place any sharp object around the machine.
- 9. Disabled person should not use the machine without a qualified person or physician in attendance.
- 10. Before using the machine to exercise, always do stretching exercises to properly warm up.
- 11. Never operate the machine if the machine is not functioning properly.


#### **CARE AND MAINTENANCE**

- 1. Inspect and tighten all parts before using the machine.
- 2. The machine can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.
- 3. Maximum user's weight: 300 lbs.

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.


SAVE THESE INSTRUCTIONS.

## WARNING LABEL REPLACEMENT

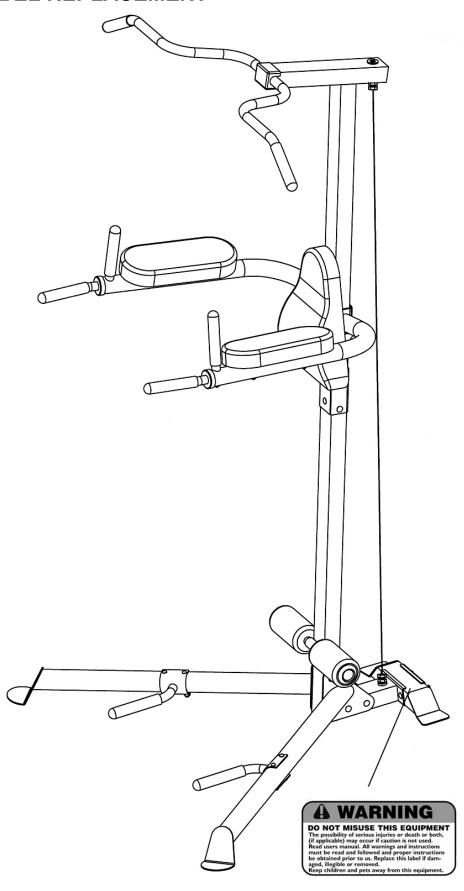

The warning label shown here has been placed on the Rear Base. If the labels are missing or illegible, please call customer service at 1-800-888-8899 for replacements. Apply the labels in the location shown.

## **HARDWARE PACK**

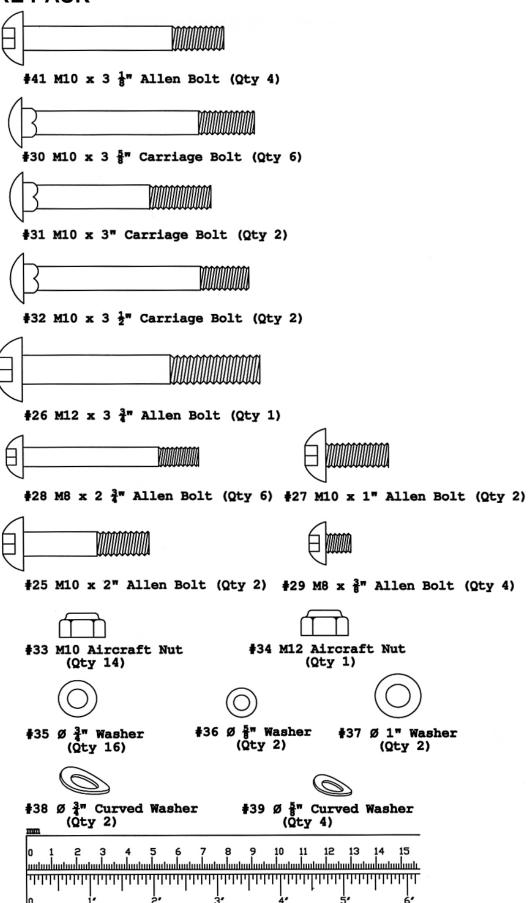


## **ASSEMBLY INSTRUCTION**

Tools Required Assembling the Machine: Two Adjustable Wrenches and Allen Wrenches NOTE: It is strongly recommended two or more people assembling this machine to avoid possible injury.


#### STEP 1 (See Diagram 1)

- A.) Attach the Lower Vertical Frame (#2) to the Rear Base (#4). Secure it with two M10 x 3 ½" Carriage Bolts (#32), one U-shaped Bracket (#14), two Ø ¾" Washers (#35), and two M10 Aircraft Nuts (#33).
- B.) Attach the Right & Left Stabilizers (#5 & #6) to the Lower Vertical Frame. Align the holes and secure them with four M10 x 3 5/8" Carriage Bolts (#30), Ø ¾" Washers (#35), and M10 Aircraft Nuts (#33).
- C.) Attach the Push-up Handles (#40) to the Right & Left Stabilizers. Secure each Handle with two M10 x 3 1/8" Allen Bolt (#41), Ø 3/4" Washers (#35), and M10 Aircraft Nuts (#33).

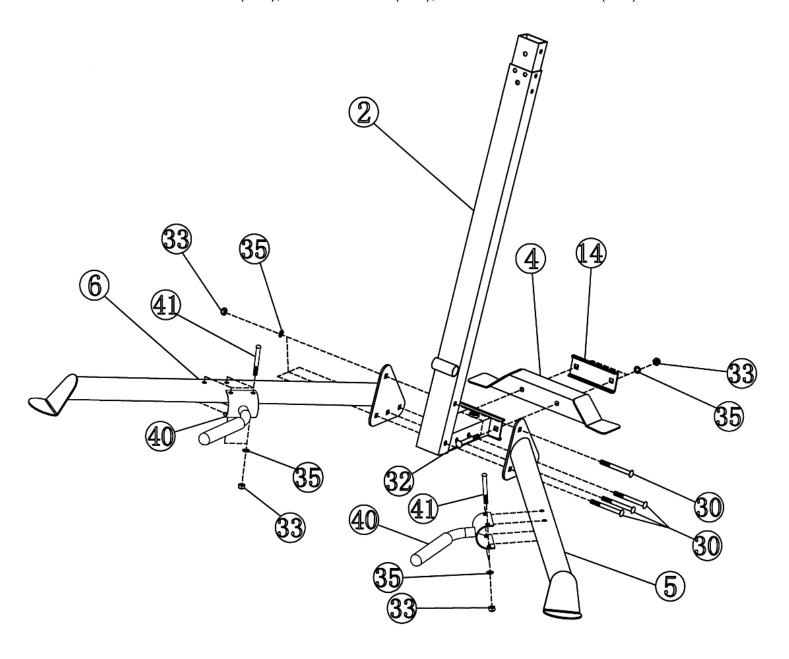


#### STEP-2 (See Diagram 2)

- A.) Attach the Upper Vertical Frame (#1) onto the Lower Vertical Frame (#2). Secure it with two L-shaped Brackets (#9), two M10 x 3" Carriage Bolts (#31) from the front, two M10 x 3 5/8" Carriage Bolts (#30) from the side, four Ø 3/4" Washers (#35), and four M10 Aircraft Nuts (#33).
- B.) Attach the Chin-up Bar (#3) to the front of Upper Vertical Frame. Secure it with two M10 x 2" Allen Bolts (#25) and Ø ¾" Washers (#35). Cover the Bolts with a 2" x 2 ¾" Plastic Cover (#16).

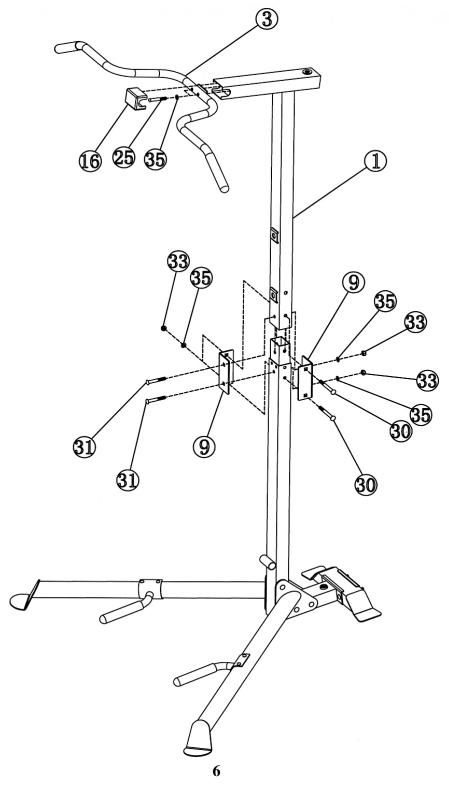


#### STEP 3 (See Diagram 3)

- A.) Attach the Left & Right Dip Supports (#7 & #8) to the Upper Vertical Frame (#1). Secure them to the Upper Vertical Frame with one M12 x 3 ¾" Allan Bolt (#26), two Ø ¾" Washers (#37), and one M10 Aircraft Nut (#34). Do NOT over tighten the nut and bolt. Make sure the arms are able to move freely.
- B.) Secure the Left & Right Dip Supports together with one Four-hole Bracket (# 15) and four M8 x 3/8" Allen Bolts (#29).
- C.) Insert a Vertical Handle (#13) into the hole on each Dip Support. Secure each Handle with one M10 x 1" Allen Bolt (#27) and Ø ¾" Curved Washer (#38).
- D.) Flip the Dip Supports up to a vertical position when doing Chin-up exercises.

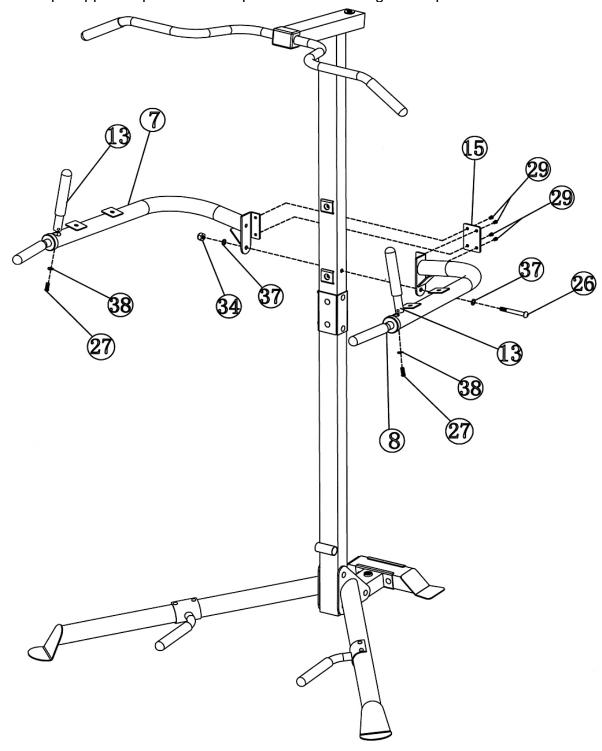


#### STEP 4 (See Diagram 4)

- A.) Attach the Backrest Pad (#12) to the Upper Vertical Frame (#1). Secure it with two M8 x 2  $\frac{3}{4}$ " Allen Bolts (#28) and  $\bigcirc$  5/8" Washers (#36).
- B.) Attach the Arm Pads (#11) to the Left & Right Dip Supports (#7 & #8). Secure each Arm Pad with two M8 x 2 ¾" Allen Bolts (#28) and Ø 5/8" Curved Washers (#39).
- C.) Insert a Foam Tube (#10) halfway through the holes on the Lower Vertical Frame (#2). Push two Foam Rolls (#24) onto the Tube from both ends. Plug two Foam Roll End Caps (#22) to the end of the tube.
- D.) Firmly thread each end of the Cable (#23) into the Upper and Lower Vertical Frames.
- E.) Securely tighten all nuts and bolts pervious installed.

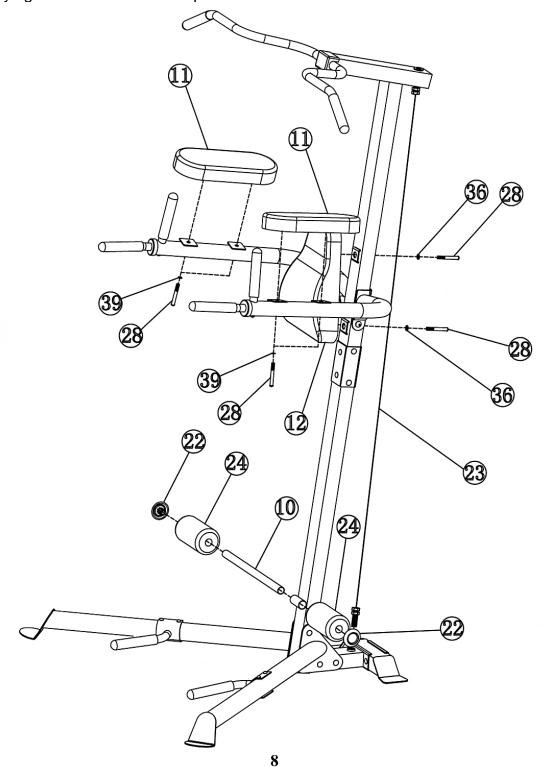

## **EXPLODED DIAGRAM**

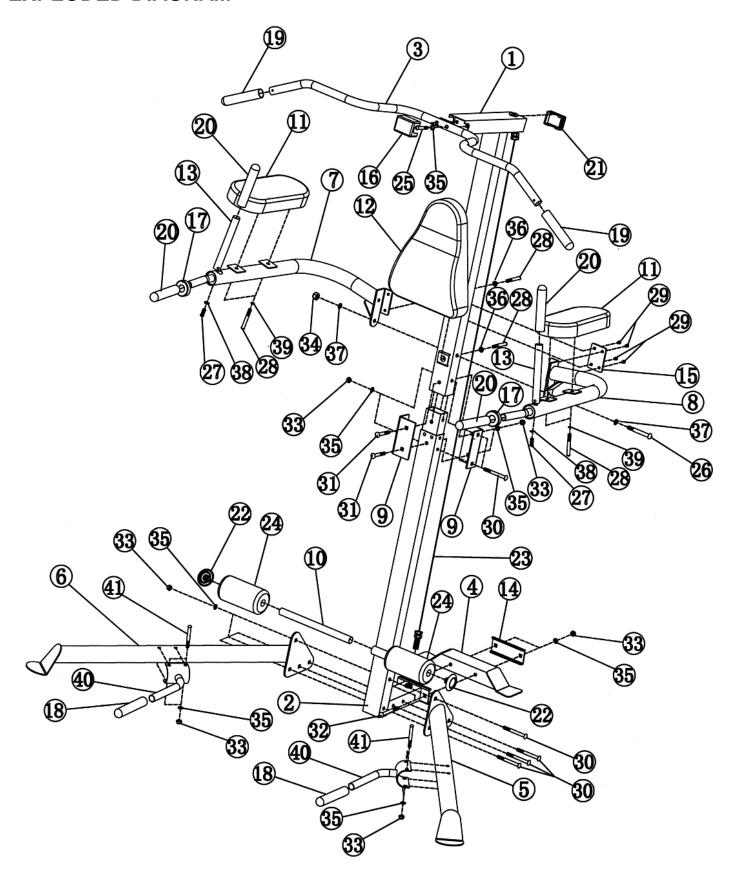

# **Parts list**

KEY N	O. DESCRIPTION	Q'ty
1	Upper Vertical Frame	1
2	Lower Vertical Frame	1
2 3 4	Chin-up Bar	1
	Rear Base	1
5	Right Stabilizer	1
6 7	Left Stabilizer	1 1
8	Left Dip Support Right Dip Support	1
9	L-shaped Bracket	2
10	Foam Tube	1
11	Arm Pad	2
12	Backrest Pad	2 1
13	Vertical Handle	2
14	U-shaped Bracket	1
15	Four-hole Bracket	1
16	2" x 2 ¾" Plastic Cover	1
17	Sleeve	2 2 2
18	Push-up Handle Grip	2
19	Chin-up Handle Grip	2
20	Dip Handle Grip	4
21	2" x 2 ¾" End Cap	1
22	Foam Roll End Cap	2 1
23 24	Cable Foam Roll	
2 <del>4</del> 25	M10 x 2" Allen Bolt	2
26	M12 x 3 ¾" Allen Bolt	2 2 1
27	M10 x 1" Allen Bolt	2
28	M8 x 2 ¾" Allen Bolt	6
29	M8 x 3/8" Allen Bolt	4
30	M10 x 3 5/8" Carriage Bolt	6
31	M10 x 3" Carriage Bolt	2
32	M10 x 3 1/2" Carriage Bolt	2 2
33	M10 Aircraft Nut	14
34	M12 Aircraft Nut	1
35	Ø ¾" Washer	16
36	Ø 5/8" Washer	2
37	Ø 1" Washer	2 2 2 4
38	Ø 3/4" Curved Washer	2
39	Ø 5/8" Curved Washer	
40	Push-up Handle	2 4
41	M10 x 3 1/8" Allen Bolt	4



## LIMITED WARRANTY

IMPEX Inc. ("IMPEX<sup>®</sup>") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the Frame from the date of purchase. This warranty extends only to the original purchaser. IMPEX's obligation under this Warranty is limited to replacing or repairing, at IMPEX's option.

All returns must be pre-authorized by IMPEX. Pre-authorization may be obtained by calling IMPEX Customer Service Department at 1-800-999-8899. All freights on products returned to IMPEX must be prepaid by the customer. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an IMPEX authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by IMPEX.

IMPEX is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal right. You may also have other rights which vary from state to state. Register on-line www.impex-fitness.com

IMPEX<sup>®</sup> INC. 2801 S. Towne Ave. Pomona, CA 91766

#### **ORDERING REPLACEMENT PARTS**

Replacement parts can be ordered by calling our Customer Service Department toll-free at **1-800-999-8899** during our regular business hours: Monday through Friday, 9 am until 5 pm Pacific standard time.

#### support@impex-fitness.com

When ordering replacement parts, always give the following information.

- 1. Model
- Description of Parts
- Part Number
- Date of Purchase